



Chevrolet Suburban 2015 - 2020

****Before you begin installing the NAVIKS unit please make sure the negative battery terminal is disconnected and the parking brake is engaged****

CAUTION

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pre-tensioner activation.


Read entire manual before starting the installation.



Pry out left side dash cover.



Unfasten **two (2)** screws at the side of the dash cover.
Unfasten **two (2)** screws under the steering wheel column cover.

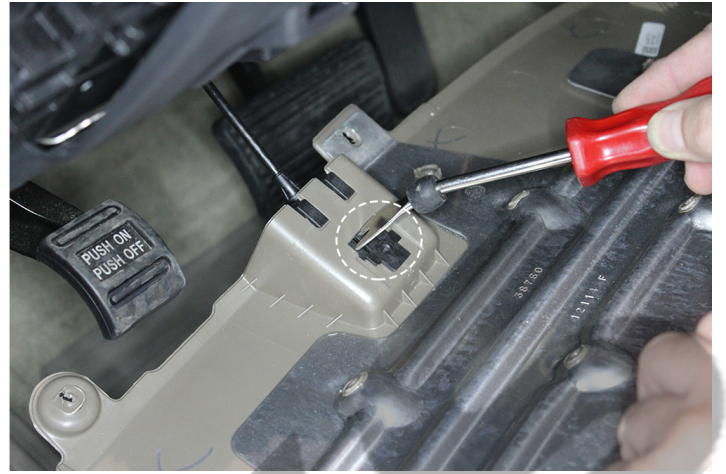


Pry out steering wheel column cover, do not pull on it as the hood latch is attached to it.
Unclip hood latch to remove steering wheel column cover.



Pry out cup holder panel.



1. Pay close attention to where clips are as it will be a bit hard to remove that panel.
2. Place hands on left and right side of the cup holder panel, pull upwards and towards yourself slowly & gently.
3. Disconnect plugs under the cup holder panel.

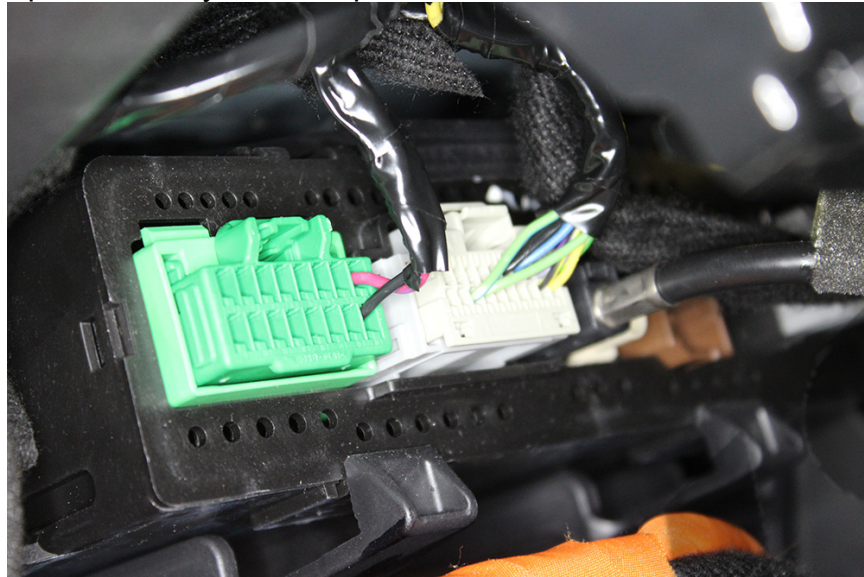

Located Under Climate Control.

1. Disconnect 20-Pin **Grey** plug from radio module.
2. Combine OEM **Grey** plug with provided plug & play harness (female end).
3. Connect male end of plug & play harness to the radio module (instead of OEM).
4. Connect VIM module last.

Video in Motion function is activated by DEFAULT.



Turn **OFF** video in motion function press rear defrost button **four (4)** times.

Turn **ON** video in motion function press rear defrost button **four (4)** times.